

Verdrahten

wie in der Betriebsanleitung
Flammenwächter IFW 15, 6.1.1.10
beschrieben.

Ionisations-Überwachung
● Klemme 4 an den Schutzleiter PE
anschließen.


UV-Überwachung
● Bei UV-Überwachung, Klemme 3
der UV-Sonde mit der Klemme 4
des Flammenwächters verbinden.

Wiring

As described in the operating in-
structions for flame detector IFW 15,
6.1.1.10.

Ionisation control
● Connect terminal 4 to the protec-
tive conductor PE.

UV control
● For UV control connect terminal
3 on the UV sensor to terminal 4
on the flame detector.

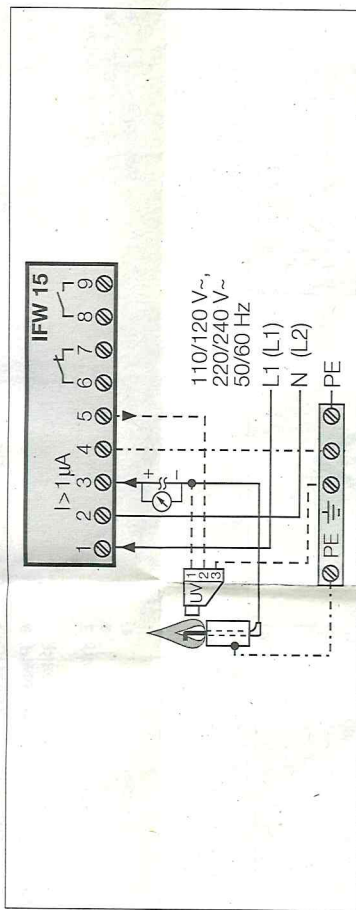

Technische Änderungen, die dem
Fortschritt dienen, vorbehalten.

Bei technischen Fragen wenden
Sie sich bitte an die für Sie zustän-
dige Niederlassung/Vertretung. Die
Adresse erfahren Sie im Internet
oder bei der G. Kromschroeder AG,
Osnabrück.

Zentrale Kundendienst-Einsatz-
leitung weltweit:

3. Kromschroeder AG, Osnabrück
Tel. +49 (0)5 41/12 14-3 65
Tel. +49 (0)5 41/12 14-4 99
Fax +49 (0)5 41/12 14-5 47

We reserve the right to make techni-
cal modifications in the interests of
progress.

If you have any technical questions
please contact your local branch
office/agent. The addresses are
available on the internet or from
G. Kromschroeder AG, Osnabrück.

G. Kromschroeder AG
Postfach 28 09
D-49018 Osnabrück
Strothweg 1
D-49504 Lotte (Büren)
Tel. +49 (0)5 41/12 14-0
Fax +49 (0)5 41/12 14-3 70
info@kromschroeder.com
www.kromschroeder.de